

## REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) AUGER HOUSING / IMPELLER ASSEMBLY

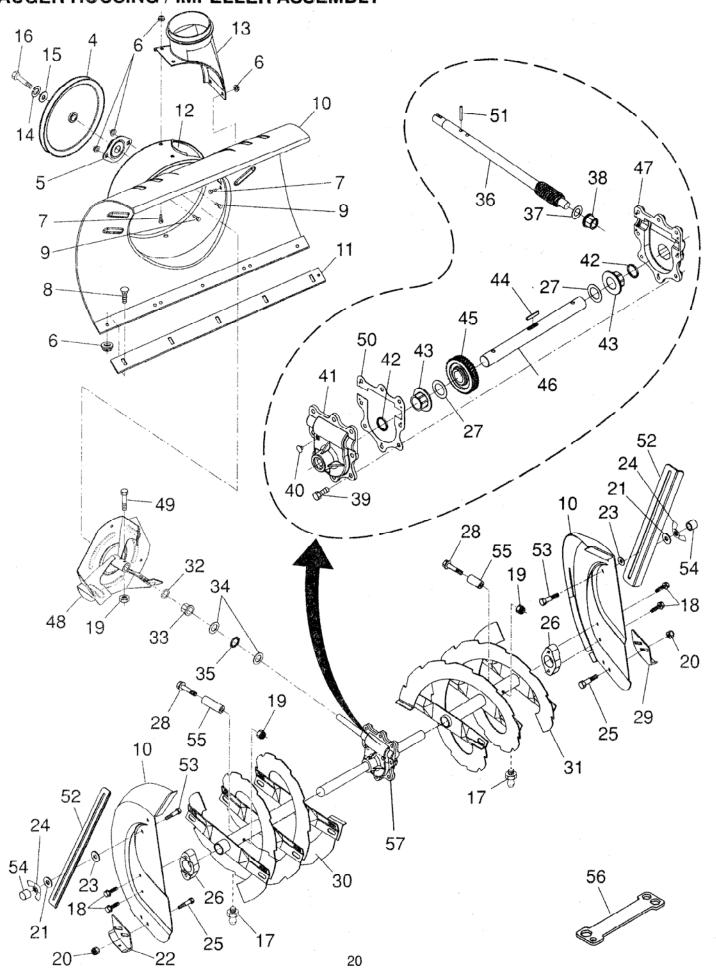

#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) AUGER HOUSING / IMPELLER ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
4	191079	Pulley, Impeller	30	405977X479	Auger Assembly, RH
5	188909	Bearing Assembly, Flange	31	405976X479	Auger Assembly, LH
6	198541	Nut, Hex Flange 5/16-18	32	407768	O-Ring
7	180355	Bolt, Flat Head, Carriage 5/16-18	33	407769	Bushing, Flange 3/4
		x 5/8	34	174681	Washer, Thrust 3/4
8	72270505	Bolt, Carriage 5/16-18 x 5/8	35	174684	Bearing, Thrust 3/4
9	199879	Bolt, Hex Head	36	407757	Shaft, Impeller
10	404926X459	Housing, Auger	37	174683	Washer, Thrust 5/8
11	404932X479	Bar, Scraper	38	407758	Bushing, Flange 5/8
12	178675X008	Bracket, Corner Discharge	39	407767	Screw, Hex Head 5/16-18 x 3/4
13	175322	Base, Discharge Chute	40	407760	Plug, Case
14	19111507	Washer, Flat	41	407761	Housing, Gearbox, RH
15	198552	Washer, Lock 5/16	42	407770	Seal, Oil
16	74950512	Screw, Hex Head 5/16-18 x 3/4	43	407762	Bushing, Flange, 1"
17	155595	Grease Fitting	44	189282	Key, Square 1/4 x 1/4 x 7/8
18	179582	Screw, Hex Head 5/16 x 1	45	407763	Gear, Worm
19	73800400	Nut, Hex Lock 1/4-20	46	407764	Shaft, Auger
20	198541	Nut, Hex Lock 5/16-18	47	407765	Housing, Gearbox, LH
21	401347	Washer, Flat 5/16	48	175321X479	Impeller Assembly
22	178777X479	Skid Plate, RH	49	74780426	Screw, Hex Head 1/4-20 x 1-5/8
23	179246	Washer, Nylon, Friction	50	407766	Gasket, Gearbox
24	128638	Wing Nut	51	7836M	Pin, Roll 3/16 x 1-1/8
25	72270506	Bolt, Shoulder 1/4-20	52	405697X479	Bar, Drift Cutter
26	174658	Bearing, Auger	53	198648	Bolt, Carriage
27	174697	Washer, Thrust, 1"	54	198709	Stop
28	192090	Bolt, Shear	55	198638	Spacer
29	174762X479	Skid Plate, LH	56	180684	Multi-Wrench
			57	196710	Gearbox Assembly


# REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) CONTROL PANEL / DISCHARGE CHUTE

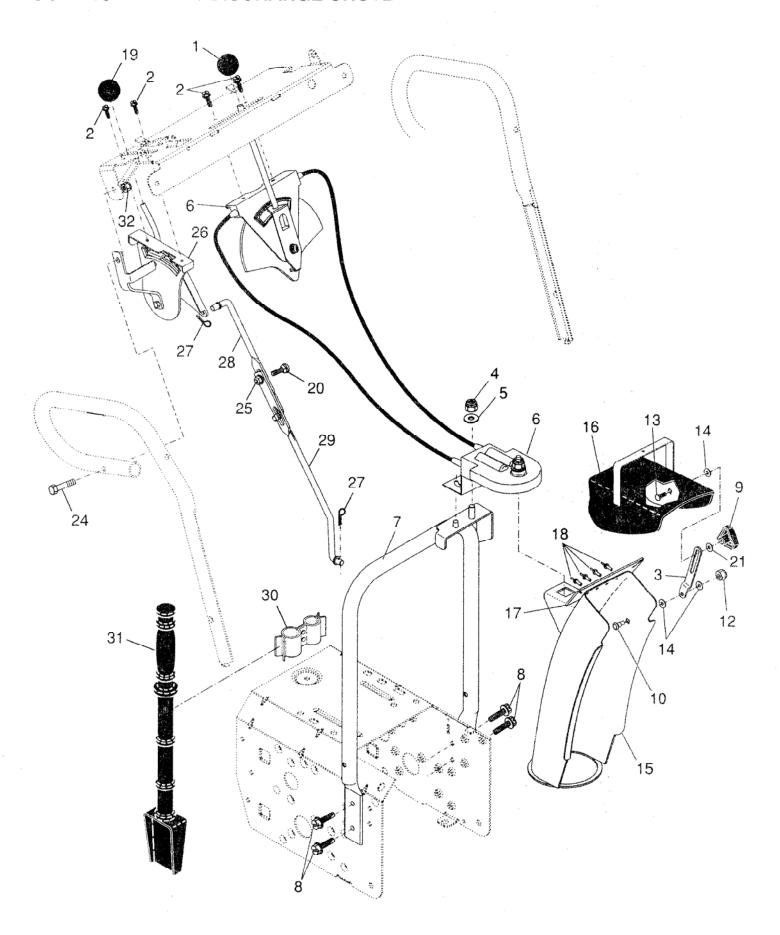

## REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) CONTROL PANEL / DISCHARGE CHUTE

KEY NO.	PART NO.	DESCRIPTION
1	183333	Knob, Lever
2	17501010	Screw #10-24 x 5/8
3	179096X479	Strap, Slotted
4	73800600	Nut, Lock 3/8-16
5	19131316	Washer, Flat 3/8
6	404974	Control Assembly, Chute Rotater
7	405784X479	Support, Pivot
8	150078	Screw, Hex Head 5/16-18 x 3/4
9	189713X615	Knob, Deflector
10	185600	Bolt, Shoulder
	191730	Nut, Lock 1/4-20
	72270505	Bolt, Carriage 5/16-18 x 5/8
	179246	Washer, Nylon
15	404770X459	Chute Assembly
	178633X459	Deflector Assembly
	179145	Seal, Deflector
	128415	Rivet, Blind
	183333	Knob, Lever
20	72270506	Bolt, Carriage 5/16-18 x 3/4
	155415	Washer, Flat
	74780528	Screw, Hex Head 5/16-18 x 1-3/4
	198541	Nut, Lock 5/16-18
26 27		Lever Assembly, Speed Control
28	169675 180445	Retainer, Hairpin
	187716	Rod, Upper, Speed Control Rod, Lower, Speed Control
	192710	Clamp, Clean-Out Tool
31	192199	Tool, Clean-Out
01	102100	rooi, olean out

#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100)

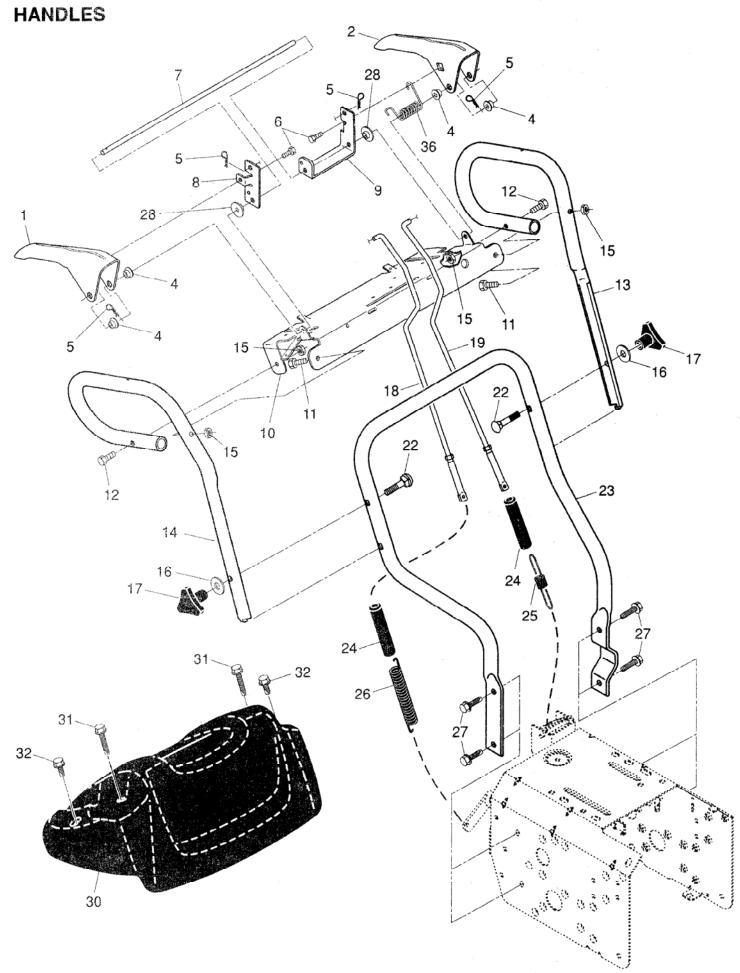


#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) HANDLES

KEY NO.	PART NO.	DESCRIPTION
1	405999X479	Lever, Auger Control, RH
2	405783X479	Lever, Traction Drive Control, LH
4	178888	Bushing, Flange
5	169675	Retainer, Hairpin
6	17060408	Screw, Hex Head 1/4-20 x 3/4
7	178652	Rod, Interlock
8	196333X008	Arm, Impeller Rod
9	196334X008	Arm, Traction Rod
10	196619X479	Panel, Control
11	74780524	Screw, Hex Head 5/16-18 x 1-1/2
12	74780528	Screw, Hex Head
13	407856X479	Tube, Handle, LH
14	407857X479	Tube, Handle, RH
15	751153	Nut, Lock 5/16-18
16	19131316	Washer, Flat 3/8
17	178899	Knob, Handle
18	180480	Rod, Auger Control
19	180481	Rod, Traction Control
22	72120618	Bolt, Carriage 3/8-16 x 2-1/4
23	178643X479	Handle Tube, Lower
24	180447	Sleeve, Spring
25	180926	Spring, Traction Drive
26	178669	Spring, Auger Control
27	17000616	Screw, Hex Head 3/8-16 x 1
28	198559	Bushing, Pivot
30	183352	Console, Panel
31	175262	Screw, Hex Head, Tapping #10-24 x 1-1/4
32	184471	Screw, Hex Head, Tapping #10-24 x 1/2

#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) DRIVE

KEY NO.	PART NO.	DESCRIPTION
1	146315	Screw, Hex Head 5/16-18 x 3/4
2	751153	Nut, Lock 5/16-18
4	198584	Screw, Hex Head 5/16-18 x 1/2
5	180017	Bearing, Flange
6	180134	Shaft, Auxiliary
7	179270	Spacer, Plate
8	192616X479	Plate, Auxiliary
9	180082	Gear, Intermediate (12/58)
10	180065	Gear, Pinion
11	187714	Rod, Clutch
12	180066	Shaft, Long, Hex
13	178807	Pin, Pivot
14	178619X479	Lever, Shifter / Wheel
15		Trunnion Bearing Assembly
16		Bracket, Pivot, Shift
17		Ring, Rubber Wheel
18		Plate, Rubber Wheel
19		Nut, Lock 5/16-18
20		Hub, Rubber Wheel
21	74760514	Screw, Hex Head 5/16-18 x 7/8
	85179	Retainer, Hairpin
23	180135	Spring, Bias
24	180081	Gear, Axle (58 Teeth)
25	178695	Pin, Pivot Lever
26	197763	Plate Assembly, Drive
27	188226	Shaft, Axle
28	197764	Shaft, Short Hex
29 30	175350X479 175349X479	Lever, Shifter Plate Bracket, Shifter Support
31	72270505	Bolt, Carriage 5/16-18 x 5/8
32	189282	Key, Square
33	188909	Bearing, Flange
34	175338X479	Plate, Drive Mounting
35	182504	Spacer, Bearing
36	191080	Pulley, Traction Drive
37	198541	Nut, Lock 5/16-18
38	19111507	Washer, Flat
39	198552	Washer, Lock 5/16
40	74950512	Screw, Hex Head 5/16-18 x 3/4
41	12000012	Ring, Retaining
43	179095	Spring, Return
44	9465M	Pin, Roll


#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100)

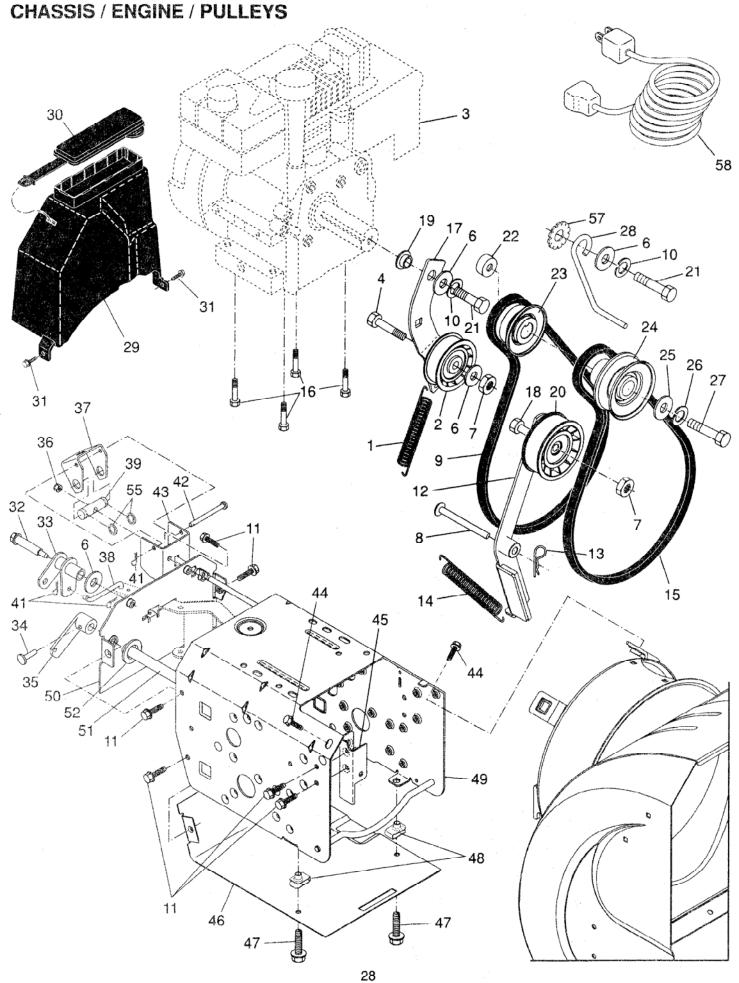


## REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) CHASSIS / ENGINE / PULLEYS

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	181044	Spring, Traction Idler	27	851084	Screw, Hex Head 3/8-24 x 1-3/8
2	180522	Pulley, Idler (2-1/4)	28	155452	Guide, Belt
3		Engine, Tecumseh, Model Number LH318SA (For engine service and	29	192213	Belt Cover Assembly (Includes Toolbox Cover)
		replacement parts, call Tecumseh	30	178830	Cover, Toolbox
		Products at 1-800-558-5402)	31	405024	Screw, Hex Head 1/4-20 x 1/2
4	74780520	Screw, Hex Head 5/16-18 x 1-1/4	32	179256	Bolt, Shoulder 5/16-18
6	59289	Washer, Flat	33	187853	Bellcrank Shifter
7	166785	Nut, Jam, Lock 5/16-18	34	198580	Clevis Pin
8	175330	Pin, Idler Pivot	35	405485	Arm, Auger Control
9	179092	V-Belt, Traction Drive	36	73800500	Nut, Lock 5/16-18
10	198552	Washer, Lock 5/16	37	178833X479	Bellcrank
11	198584	Screw, Hex Washer Head	38	187101	Link, Speed Control
		5/16-18 x 1/2	39	192110	Trunnion, Clutch
12	179259	Impeller Arm / Pad Assembly	41	700279	Hairpin, Cotter 3/32 x 1/2
13	85179	Retainer, Hairpin	42	179065	Pin, Bellcrank
14	178828	Spring, Brake	43	179063X479	Bracket, Bellcrank
15	183533	V-Belt, Impeller Drive	44	17000616	Screw, Hex Head
16	150406	Screw, Hex Head 3/8-16 x 1-1/4	45	175324X479	Pivot Bracket, Impeller Idler Arm
17	179354X008	Arm, Idler	46	178624X479	Pan, Frame Bottom
18	74780524	Screw, Hex Head 5/16-18 x 1-1/2	47	71020512	Screw, Hex Head 5/16-18 x 3/4
19	198559	Bushing, Idler Pivot	48	181156	Nut, Speed 5/16-18
20	180523	Pulley, Idler (2-3/4)	49	404431X459	Frame Assembly
21	74610516	Screw, Hex Head 5/16-24 x 1	50	187715X459	Plate, Frame End
22	179371	Spacer, Engine Pulley	51	406109	Shaft, Auger Control
23	180478	Pulley, Engine, Traction Drive	52	57079	Washer, Hardened
24	179157	Pulley, Engine, Impeller Drive	55	12000002	E-Ring
25	400026	Washer, Flat 3/8	57	11050500	Washer, Lock, External Tooth
26	850263	Washer, Lock 3/8	58	198563	Power Cord

#### REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100)

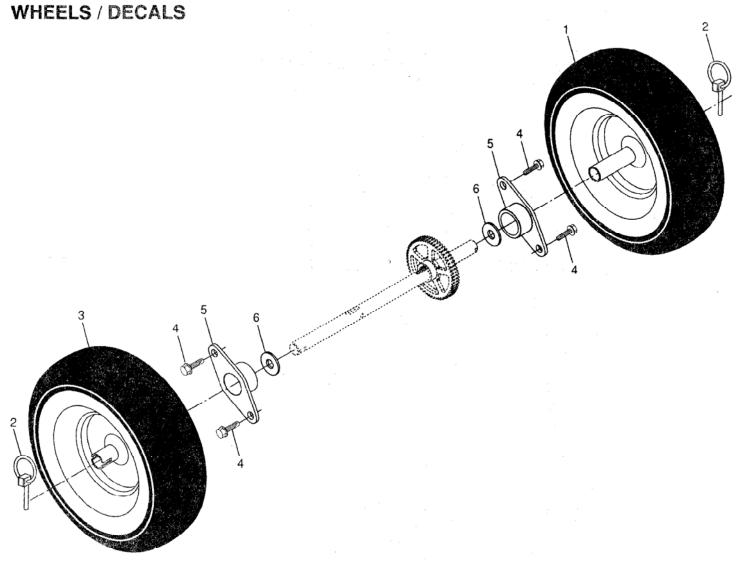

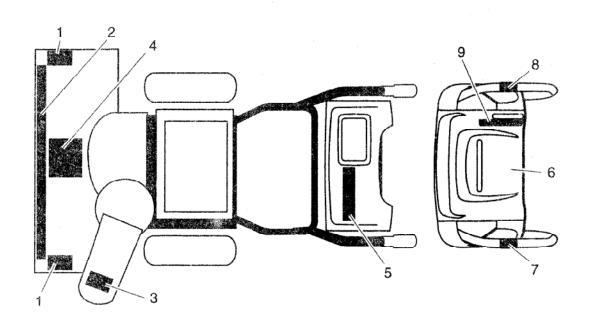

## REPAIR PARTS SNOW THROWER - MODEL NO. 62780X31 (96197001100) WHEELS / DECALS

PART NO.	DESCRIPTION
187833X418	Wheel Assembly, 16", LH
155443	Pin, Klik 1/4
187865X418	Wheel Assembly, 16", RH
146315	Screw, Hex Head 5/16-18 x 3/4
179830	Bearing, Axle
174697	Washer, Thrust (1")
	NO. 187833X418 155443 187865X418 146315 179830

KEY NO.	PART NO.	DESCRIPTION
1	181037	Decal, Danger
2	407838	Decal, Murray Pro
3	181035	Decal, Danger, Deflector
4	181042	Decal, Danger
5	407589	Decal, Murray Pro
6	181033	Decal, Instruction
7	155798	Decal, Traction Lever
8	155800	Decal, Auger Lever
9	181039	Decal, Speed Control
	406583	Owner's Manual, English
	406584	Owner's Manual, French



Murray Pro Series 4 Year Warranty

The Home Depot Canada is doubling the warranty period of the manufacturer's warranty and those of the companies that manufacture engines, accessories, transmissions, batteries, transaxles and other sourced components.

To make claim under this warranty does not change. Return the unit, or if authorized in advance, the defective part, along with your proof of purchase to The Home Depot Canada store where purchased or closest to you, or, to an authorized Service Dealer. To locate an authorized Service Dealer, call Briggs and Stratton Canada, Monday to Friday 8:30 A.M to 5 PM Eastern time excluding holidays, 1-800-661-6662 and ask for Customer Service.

#### LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- This warranty does not apply to the engine, other than EHP manufactured transaxle/ transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by Electrolux Home Products.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 45 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, contact:

Briggs and Stratton Canada Customer Service 1195 Courtneypark Dr. East Mississauga, Ontario L5T-1R1

Or, Call Toll Free:

1-800-661-6662

8:30 am - 5 pm ET, Mon-Fri and ask for Customer Service

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.