



Ref #	Part Number	Qty	Description
1	873510400		Nut Hex Keps 1/4-20
2	532105002		Assembly, Cable
3	817021008		Screw, Tap Hex Hd #10-24 x 1/2
4	532108236		Bracket, Switch
5	532104445		Switch, Interlock
6	532109553		Switch, Interlock
7	817211008		Screw, Hex Wsh. Tap #10-16 x 1/2
8	532122147		Key, Molded
9	532123620		Cover, Key Ignition
10	532124211		Nut, Ignition
11	532125099		Switch, Ignition
12	532124083		Cover, Ignition Switch
13	532124756		Tie, Cable
14	532121305		Switch, Plunger
15	873510500		Keps, Nut 5/16-18
16	532108824		Fuse
17	532000596		Assembly, Cable
18	532123703		Harness, Ignition
19	873350400		Nut, Hex Jam 1/4-20
20	810090400		Washer, Lock 1/4
21	874780408		Bolt Fin. Hex 1/4-20 UNC x 1/2 Gr.5
22	811050400		Washer, Lock Ext. Tooth 1/4
23	532124783		Cover, Terminal
24	532109081		Solenoid
25	874760412		Bolt, Hex Hed. 1/4-20 UNC x 3/4
26	819091016		Washer 9/32 x 5/8 x 16 Ga.
27	810040400		Washer, Lock Hvy. Helical Spring 1/4
28	532121300		Battery, Cap
29	532123198		Nut, Plastic, Locking Nut 1/4-20
30	532102476		Guard, Terminal
31	873220400		Nut, Fin. Hex 1/4-20 UNC
32	872240460		Bolt, Carriage 1/4-20 UNC x 7 1/2
33	532124886		Tray, Battery
34	532121310		Battery
	532127735		Manual, Operator's(English) Not Shown.
	MS9811		Briggs & Stratton, Operating and Maintenance Manual Not Shown.
	532125547		Parts List Not Shown.
	532101539		Sheet, Slope Not Shown.