




# REPAIR PARTS

SEARS TRIMMER MODEL 358.796121


## ENGINE PARTS

**Note:**  
Cylinder and Internal  
Components are  
**NOT SERVICEABLE.**  
Use Replacement Engine

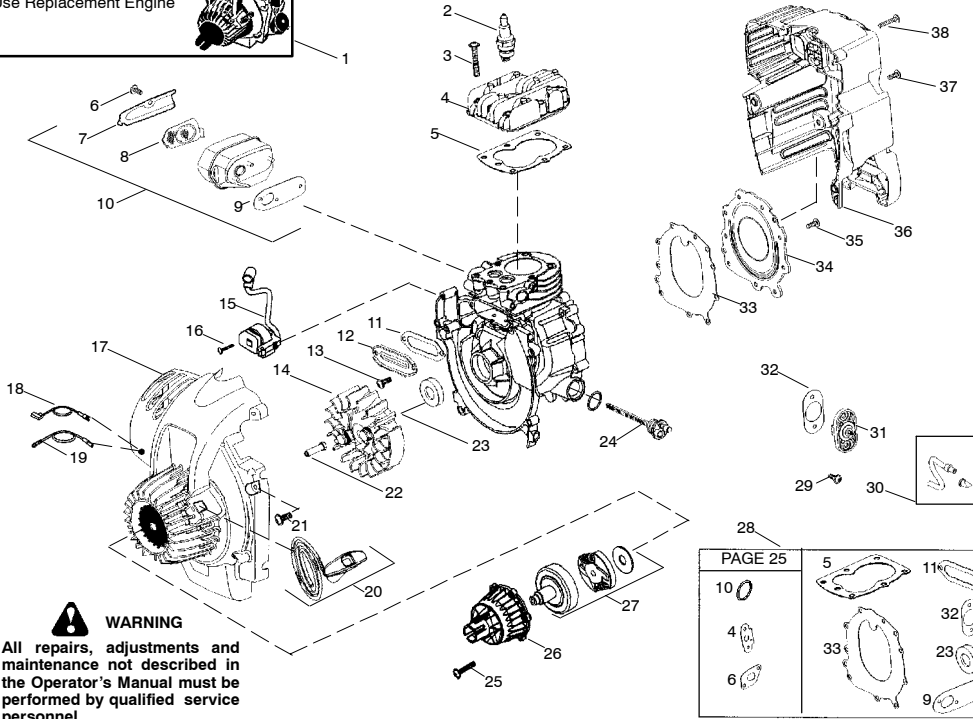

### WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.


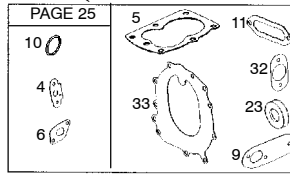


Ref.	Part No.	Description	Ref.	Part No.	Description	Part No.	Description
1.	021032 -0015	Replacement Engine	18.	699873	Assembly-Wire	Not Shown	
2.	696876	Spark Plug	19.	699874	Assembly-Wire		
3.	696891	Screw-Cyl. Head	20.	699944	Grip-Starter Rope(Incl. Rope)	275064	Manual-Owner's(B&S)
4.	696848	Head-Cylinder	21.	696889	Screw-Blower Hsg.	275072	Manual-Repair(B&S)
5.	696865	Gasket-Cyl. Head	22.	699870	Nut-Flywheel	699969	Cup-Oil Fill(B&S)
6.	697040	Screw-Muffler Defl.	23.	696879	Seal-Oil	697060	Label-Kit(B&S)
7.	697039	Deflector-Muffler (Incl. #6)	24.	696930	Dipstick (Incl. o-ring)	19538	Puller-Flywheel(B&S)
8.	697038	Arrestor-Spark	25.	696895	Screw (Starter Clutch)		
9.	697035	Gasket-Exhaust	26.	699888	Cover-Clutch		
10.	696874	Assy-Muffler (Incl. # 6-9)	27.	699871	Clutch-Starter		
11.	696931	Gasket-Breather	28.	697010	Kit-Engine Gasket Set		
12.	696849	Cover-Valve	29.	696889	Screw-Cam Gear Cover		
13.	696889	Screw-Valve Cover	30.	696871	Tube-Breather		
14.	696885	Assy-Flywheel	31.	696967	Cover-Cam Gear		
15.	699875	Armature-Magneto	32.	696929	Gasket-Cam Gear Cover		
16.	696892	Screw-Magneto	33.	696866	Gasket-Crankcase		
17.	699877	Blower Hsg./Rewind (Incl. 20)	34.	696950	Cover-Crankcase(Incl. 33)		
			35.	696889	Screw-Crankcase Cover		
			36.	696936	Shield-Cylinder		
			37.	696889	Screw-Cyl. Shield		
			38.	696895	Screw-Cyl. Shield(A)		

# REPAIR PARTS

SEARS TRIMMER MODEL 358.796121

ENGINE PARTS 

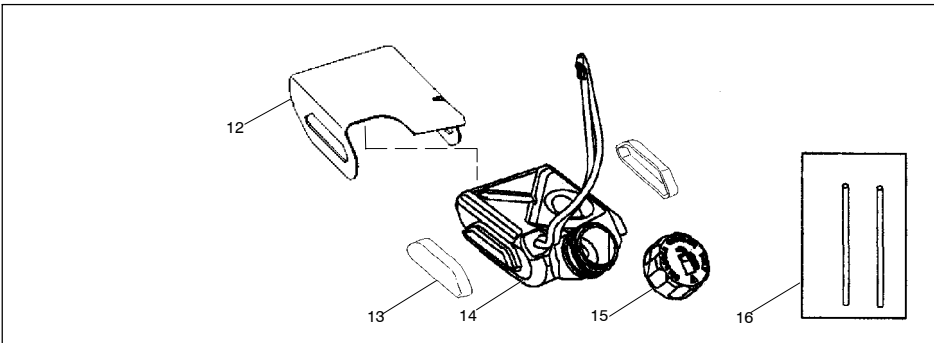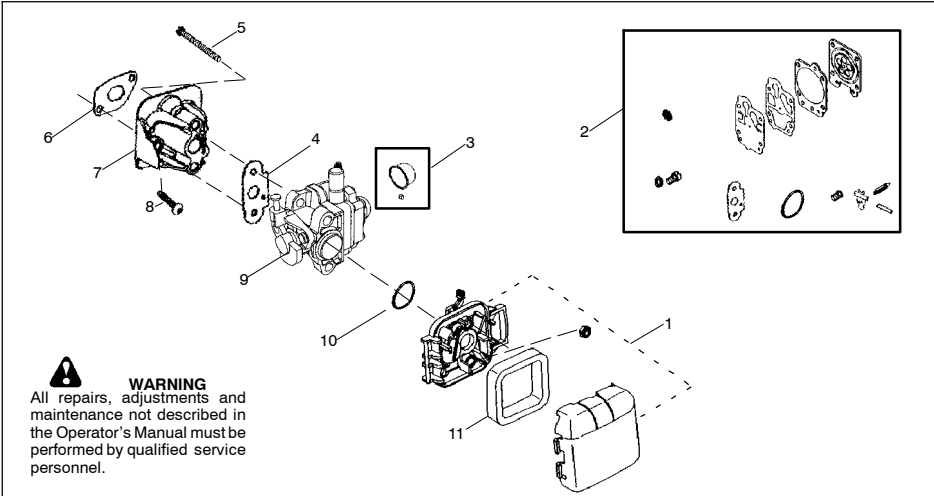

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	696924	Cover-Air Cleaner	13.	696872	Insulator
2.	697008	Kit-Carburetor Overhaul	14.	696919	Assy-Fuel Tank (Incl. 12,13,15,16)
3.	696989	Primer-Carburetor	15.	696921	Cap-Fuel Tank
4.	696868	Gasket-Intake	16.	699876	Sleeve-Fuel Line
5.	696894	Screw-Carburetor			
6.	696867	Gasket-Intake			
7.	696870	Spacer-Carburetor			
8.	696893	Screw-Carburetor Adapter			
9.	696949	Carburetor			
10.	699942	Seal O-ring (Carburetor)			
11.	696923	Filter-Air Cleaner Foam			
12.	696922	Shield-Heat			