


REPAIR PARTS

SEARS MODEL 944.411372


⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

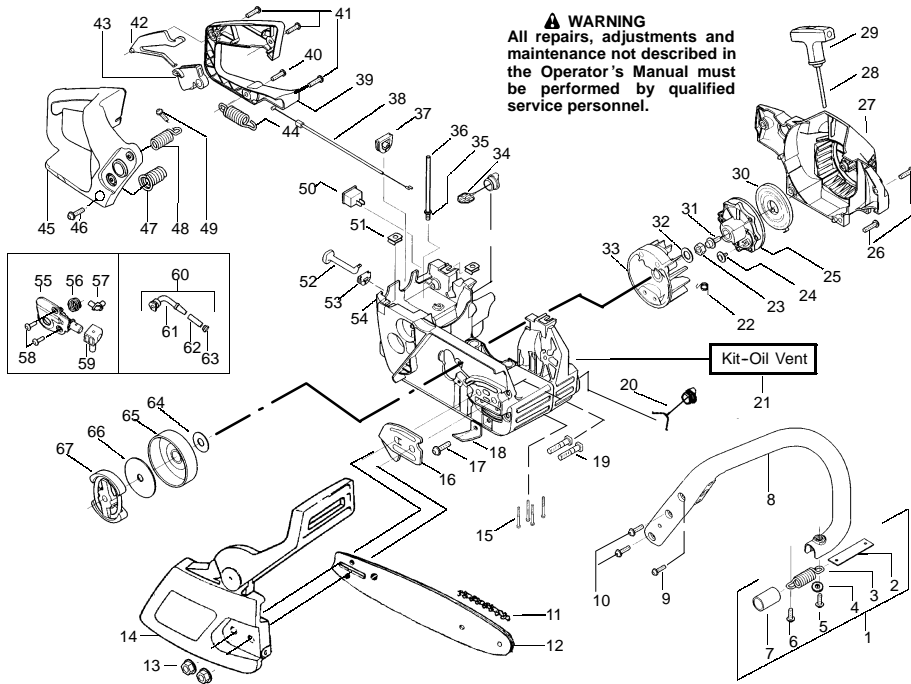

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530047963	Assy.-Isolator	31.	530015920	Screw	59.	530019206	Seal Block
2.	530047608	Limiters Strap	32.	530015127	Washer-Flywheel	60.	530047663	Assy-Oil Pick-up (Incl. 61-63)
3.	530042082	Spring-Isolator	33.	530047534	Assy-Flywheel	61.	530038373	Pick-up Oiler
4.	530015123	Washer	34.	530047192	Assy-Fuel Cap	62.	530037821	Oil Filter
5.	530016018	Screw	35.	530023877	Fitting-fuel line	63.	530030189	Plug-Oil Filter
6.	530015843	Screw	36.	530069216	Kit-Fuel line (large)	64.	530015907	Washer-Thrust
7.	530036142	Sleeve-AV Spring	37.	530047631	Grommet-Cable	65.	530047061	Assy.-Clutch Drum w/bearing
8.	530047583	Front Handle	38.	530047602	Cable-Throttle	66.	530015611	Washer-Clutch
9.	530015940	Screw	39.	530047581	Cover-Rear Handle	67.	530014949	Assy. Clutch
10.	530015814	Screw	40.	530015886	Screw			
11.	71-3629	Chain-16"	41.	530015906	Screw			
12.	71-36596	Bar-EZ-Adjust-16"	42.	530036098	Throttle Lockout			
13.	530015917	Nut-Bar Mounting	43.	530036097	Trigger-Throttle			
14.	530054725	Kit-Chain Brake	44.	530042082	Spring-Isolator			
15.	530016132	Screw	45.	530047582	Handle - Rear			
16.	530038238	Plate-Bar Mount.	46.	530015814	Screw			
17.	530015814	Screw	47.	530053274	Assy Isolator-lower			
18.	530029850	Chain Catcher	48.	530071385	Kit-Isolator (Upper)			
19.	530016133	Bolt-Bar	49.	530015875	Screw			
20.	530010846	Assy-Oil Cap	50.	530069572	Kit-Switch			
21.	530071666	Kit-Oil Vent	51.	530015922	Nut-"U"-Type			
22.	530023817	Spring-Starter Dog	52.	530047605	Knob-Choke	530163297	Manual-Operator's	
23.	530016134	Nut-Flywheel	53.	530049005	Grommet-Knob	530053163	Decal-Warning	
24.	530016080	Screw	54.	530056600	Chassis Ass'y. (Incl. 19,21 & caps & fuel lines)			
25.	530037817	Starter Pulley	55.	530071259	Kit - Oil Pump (incl. 56,57 & 59)			
26.	530015892	Screw	56.	530037820	Gear-Worm Spring			
27.	530054717	Fan Housing	57.	530049477	Elbow-Oil Pickup			
28.	530069232	Kit - Rope	58.	530016064	Screw			
29.	530056402	Handle-Starter						
30.	530027531	Spring-Recoil						

REPAIR PARTS

SEARS MODEL 944.411372

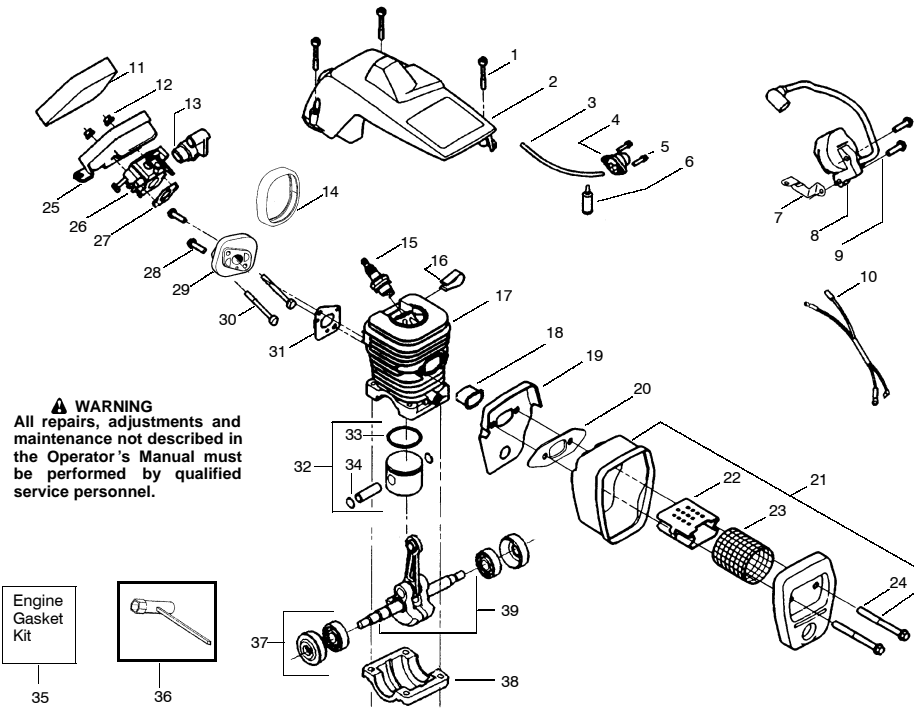

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530016153	Screw	24.	530016132	Bolt
2.	530071310	Cylinder Shield	25.	530047604	Air Filter Housing
3.	530069247	Kit-Fuel Line (Small)	26.	530071621	Kit-Carburetor (WT625)
4.	530047213	Assy-Air Purge	27.	530069608	Carb. Gasket (kit)
5.	530015780	Screw	28.	530016386	Screw
6.	530095646	Assy-Fuel Pick-up	29.	530049700	Adapter-Carb.
7.	530047442	Ground Strap	30.	530016187	Screw
8.	530039167	Ignition Module	31.	530069608	Gasket-Carb Adapter (kit)
9.	530015814	Screw	32.	530071408	Kit-Piston (Incl. 33 & 34)
10.	530049117	Assy-Wire Harness	33.	530037829	Ring-Piston
11.	530037793	Foam-Air Filter	34.	530015697	Retainer-Piston Pin
12.	530016101	Nut	35.	530069608	Kit-Engine Gasket (Incl. 20, 27 & 31)
13.	530035526	Grommet	36.	530031163	Bar Wrench
14.	530054144	Seal-Carb Adapter	37.	530056363	Assy-Seal & Bearing
15.	Champion	Spark Plug (RCJ-7Y)	38.	530037935	Cap-Crankcase
16.	530016136	Clip-High Tension Lead	39.	530047062	Assy-Crankshaft
17.	530071412	Kit-Cylinder			
18.	530037652	Heat Insulator			
19.	530049870	Backplate-Muffler			
20.	530069608	Gasket-Muffler (kit)			
21.	530047207	Assy-Muffler (Incl. 22-24)			
22.	530037813	Diffuser-Muffler			
23.	530036103	Screen-Spark Arrestor			