


REPAIR PARTS

SEARS MODEL 944.411462

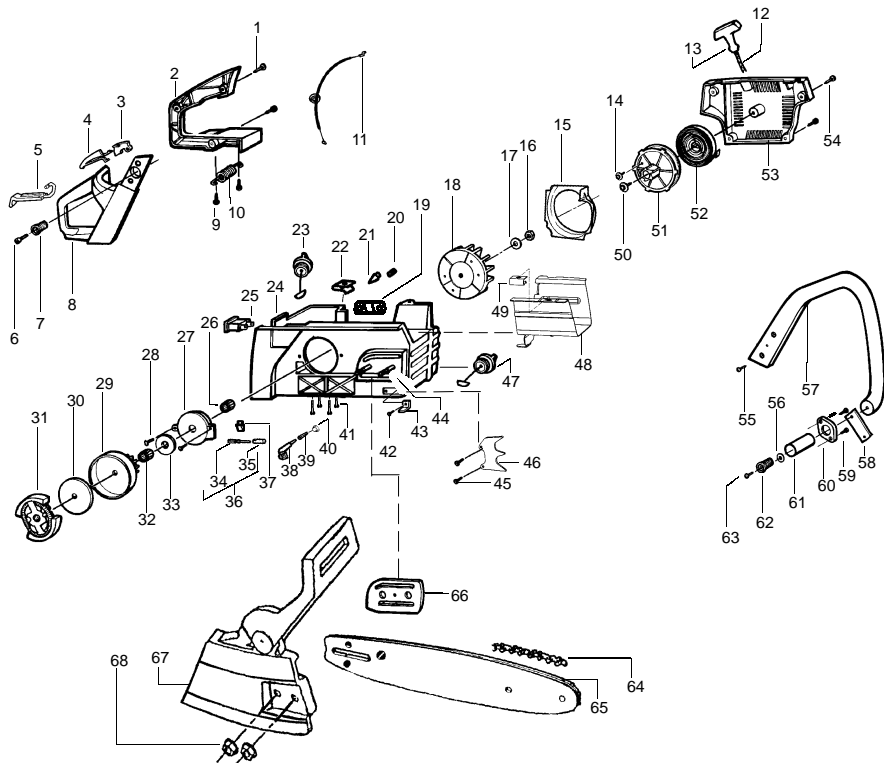

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530015957	Screw	23.	530010845	Assy-Fuel Cap	47.	530010846	Assy-Oil Cap
2.	530036491	Cover-Handle	24.	530054713	Assy-Chassis	48.	530055406	Shield-Heat
3.	530036097	Trigger-Throttle	25.	530069572	Kit-Switch	49.	530055322	Clip-"U"
4.	530036098	Lockout-Throttle	26.	530029833	Worm-Oil Pump	50.	530015920	Screw
5.	530053443	Lever-Choke	27.	530029835	Hsg.-Oil Pump	51.	530069313	Kit-Starter Pulley
6.	530015937	Screw	28.	530015896	Screw	52.	530015891	Spring-Recoil
7.	530038985	Spring-Isolator	29.	530069342	Kit-Clutch Drum	53.	530054712	Housing-Fan
8.	530036130	Handle-Rear	30.	530015611	Washer-Clutch	54.	530015892	Screw
9.	530015906	Screw	31.	530014949	Assy-Clutch	55.	530015814	Screw
10.	530038986	Spring-Isolator	32.	530032119	Bearing-Clutch	56.	530015123	Washer
11.	530038471	Assy-Throttle Cable (Incl. Grommet)	33.	530015907	Washer-Thrust	57.	530038327	Handle-Front
12.	530069232	Kit-Rope	34.	530029838	Assy-Plunger/Gear	58.	530036113	Front Strap-AV
13.	530037485	Handle-Starter	35.	530029834	Barrel-Oil Pump	59.	530015775	Screw-Plate
14.	530016080	Screw	36.	530014410	Assy-Oil Pump (Incl. 28, 35, & 36)	60.	530036101	Plate-Isolator
15.	530047667	Plate-Baffle Fan	37.	530019174	Seal-Oil	61.	530036142	Spring Sleeve-AV
16.	530016071	Nut-Flywheel	38.	530037057	Pickup-Oil	62.	530038985	Spring-Isolator
17.	530015127	Washer-Flywheel	39.	530037821	Filter-Oil	63.	530015984	Screw
18.	530039147	Assy-Flywheel	40.	530030189	Plug-Oil Filter	64.	71-3635	Chain 20"
19.	530036043	Plate-Support (Bar Stud)	41.	530016037	Screw	65.	530044829	Bar 20"
20.	530029868	Plug-Vent	42.	530015814	Screw	66.	530047855	Bar Plate
21.	530026119	Valve-Check	43.	530029850	Chain Catcher	67.	530054724	Assy-ChainBrake
22.	530015922	Nut-Speed	44.	530015877	Bar Bolt	68.	530015917	Nut-Bar Mounting
			45.	530015805	Screw			
			46.	530014381	Kit-Spike Assy.			