

FLAT RATE LABOR SCHEDULE

CHAIN SAWS

MODEL	ENGINE GROUP CODE	MODEL	ENGINE GROUP CODE
180	1	1800	1
190	1	1900	2
200	1	1950	2
205	1	1975	2
210	2	2000	1
220	2	2025	2
221	2	2050	2
225	1	2075	2
230	2	2100	1
235	1	2150	2
236	1	2160	2
255	2	2175	2
260	2	2200	2
262	2	2250	2
285	4	2300	1
295	2	2350	1
305	4	2375	2
310	2	2400	1
315	2	2450	2
330	4	2500	2
335	4	2550	2
336	4	2555	2
365	4	2600	2
380	4	2700	4
P3314	2	2750	2
P3314WS	2	2775	2
P3314WSA	2	2800	4
P3416	2	2900	2
P3516PR	2	3000	4
P3818WT	2	3050	2
P4018WT	2	3100	4
PP3816	2	3300	4
PP3816AV	2	3350	4
PP4218	2	3450	4

PP4218AV	2	3500	4
PPB4018	2	3600	4
S1970	2	3750	4
PPB1634	2	S23	1
PPB1838	2	S25	2
325	6	S1634	2
405	5	S1838	2
425	5	SM4018	2
445	5	PP4620AV	2
455	5	505	5
525	5	655	5

FLAT RATE LABOR SCHEDULE

LABOR RATE BASED ON 1/10 INCREMENTS OF AN HOUR (1=6 minutes)

LABOR CODE	REPAIR DESCRIPTION	ENGINE GROUP					
		1	2	3	4	5	6
A	POWER HEAD – Remove and /or replace one or more of the following: Cylinder, piston, ring, two piece rod, or rod bearing	.8	1.1	1.2	1.3	1.0	.8
B	STARTER – remove and/or replace one or more of the following: starter rope, recoil, spring, starter pulley, starter dog spring, or starter housing	.5	.5	.6	.6	.5	.5
C	IGNITION – remove and replace flywheel, or ignition module. Adjust module air gap setting.	.7	.8	.7	.7	.7	.5
D	CARBURETOR – Remove, repair and/or replace carburetor parts	.7	.7	.7	.7	.5	.5
E	FUEL TANK – Remove and replace. DO NOT repair a fuel tank; always replace	.5		.7	.9		
F	CLUTCH – Remove and /or repair	.5	.5	.5	.5	.5	.5
G	OIL SEAL PTO SIDE – Remove and replace	.6	.6	.6	.6	.7	.5
H	HANDLE AND CARBURETOR HOUSING – Remove and replace	.5	.9	.5	.9		
I	REED VALVE –Remove and replace	.5	.7			.5	
J	OIL PUMP – Remove, repair and/or replace	.6	.7	.6	.6	.5	.5
K	ANTI-VIBE MOUNTS – Replace	.5	.5	.6	.6	.5	.5
L	MINOR REPAIRS – Replace oil lines, fuel lines, throttle linkages, carburetor adjustments, etc.	.5	.5	.5	.5	.5	.5