


K46 Drain Port Location

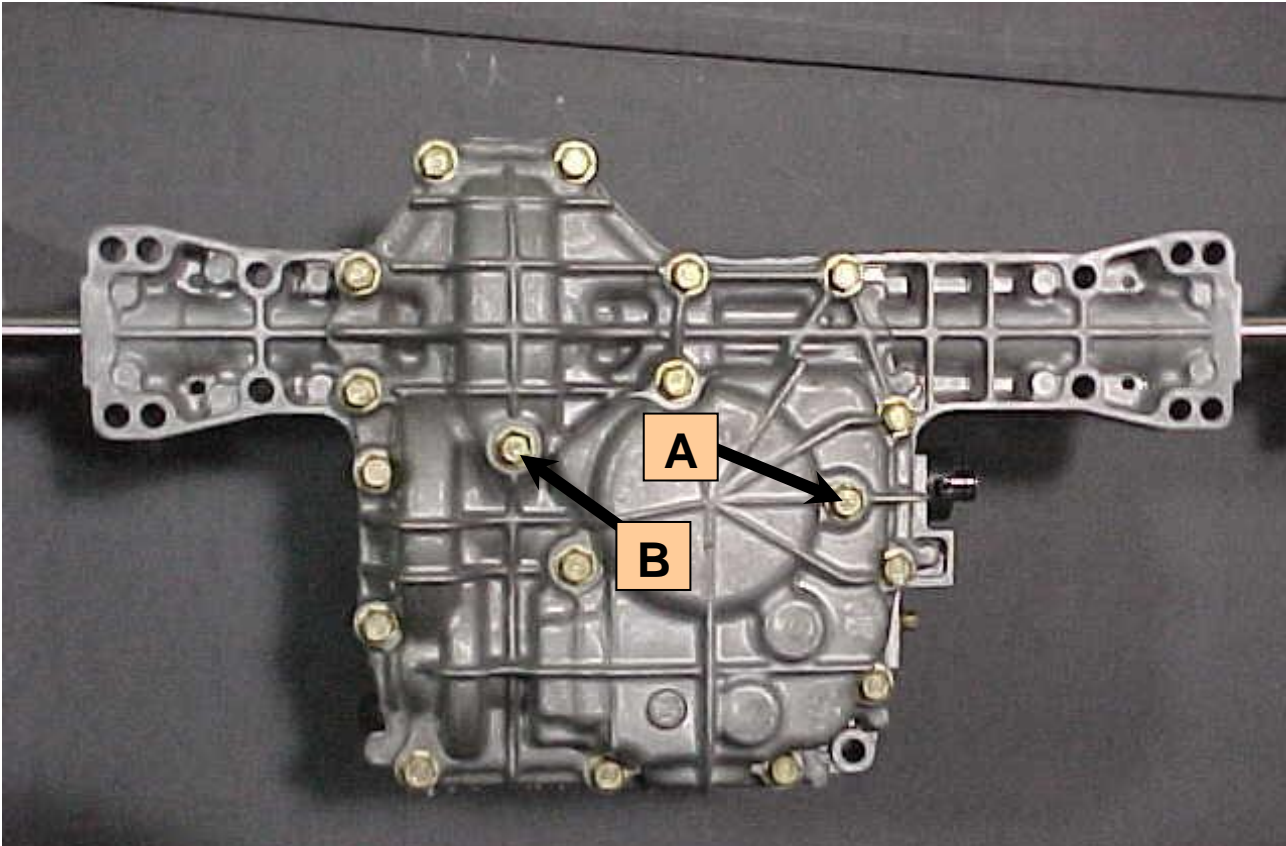

Location A = Drains oil from Hydrostatic compartment.

Location B = Drains oil from Gear Compartment.

IF YOU WANT TO ADD A DRAIN HOLE TO THE BOTTOM OF THE K46 CASE SEE BELOW

1. Add the (2) ports yourself by drilling & taping holes through the bosses provided in the lower case.
2. Order and install the following model K46 service parts w/8 mm drain bolts.

1 pc.	1A646084163	Lower Case (includes drain ports)
2 pc.	187Q0399940	Drain Bolt Kit (includes seal washer)